


There are two options when it comes to adding Tyre Types, these are described below:

Option 1:

To add or edit Tyre Types, click on your username at the top-right of the screen (1) and then click Settings (2):

 If "Settings" is not visible in your menu, contact your system administrator to request access.

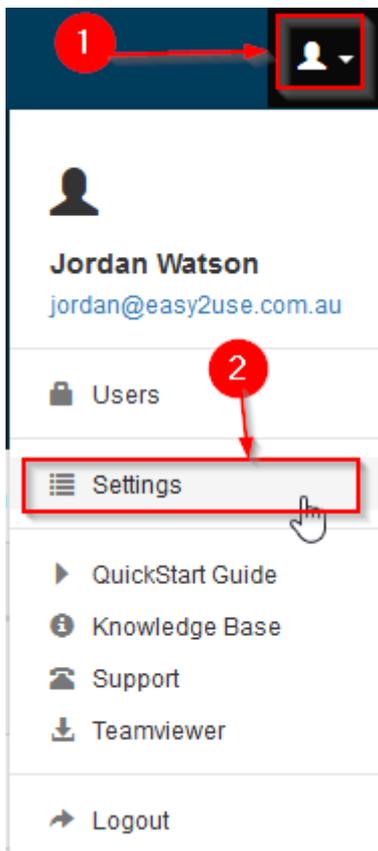

On the left-hand side of the screen, use the scroll bar (1) to scroll to the bottom of the list. Once you have reached the bottom you will see Tyre Types (2), click on Tyre Types:

Add or Edit Tyre Types

The screenshot shows the Gearbox Business Settings interface. The left sidebar has 'Tyre Types' highlighted with a red circle and a '2' in a red circle. The main content area shows 'Business Information', 'Gearbox Options', 'Subscription Status', and 'System Parameters'.

Business Information	
Business Name:	Easy 2 Use Transport
Address1:	Sulle 2
Address2:	05 Peter Brock Drive
City:	Oran Park Town
State:	NSW
Postcode:	2570
ABN:	16 131 841 840


Gearbox Options	Subscription Status
Maintenance (Gearbox)	Active
Employee	Active
Compliance	Active
Parts & Inventory	Active
Documents	Active
Prestart App	Active
API	Coming Soon

Key	Value	Description
DISPLAY_FUEL_TIMESTAMP	TRUE	Displays fuel records datetime
DISPLAY_REPAIR_PARTS	FALSE	Displays the parts selected in a service on a Repairs JobCard
DISPLAY_SERVICE_ALIAS	TRUE	Displays the Service Alias on a Service JobCard

From this screen you can Add New Type (1) of Tyre, delete (2) an existing Tyre Type and modify an existing tag (3) by clicking the field:

The screenshot shows the Gearbox Tyre Types page. The 'Add New Type' button is highlighted with a red circle and a '1' in a red circle. The text field contains 'adjustment' with a red circle and a '3' in a red circle. The 'Delete' button is highlighted with a red circle and a '2' in a red circle.

Once you have clicked Add New Type you will be taken to a new screen where you can enter the Tyre Type (1), e.g. "Puncture", "Toyo" etc. Once you have entered your Tyre Type, click Save (2):

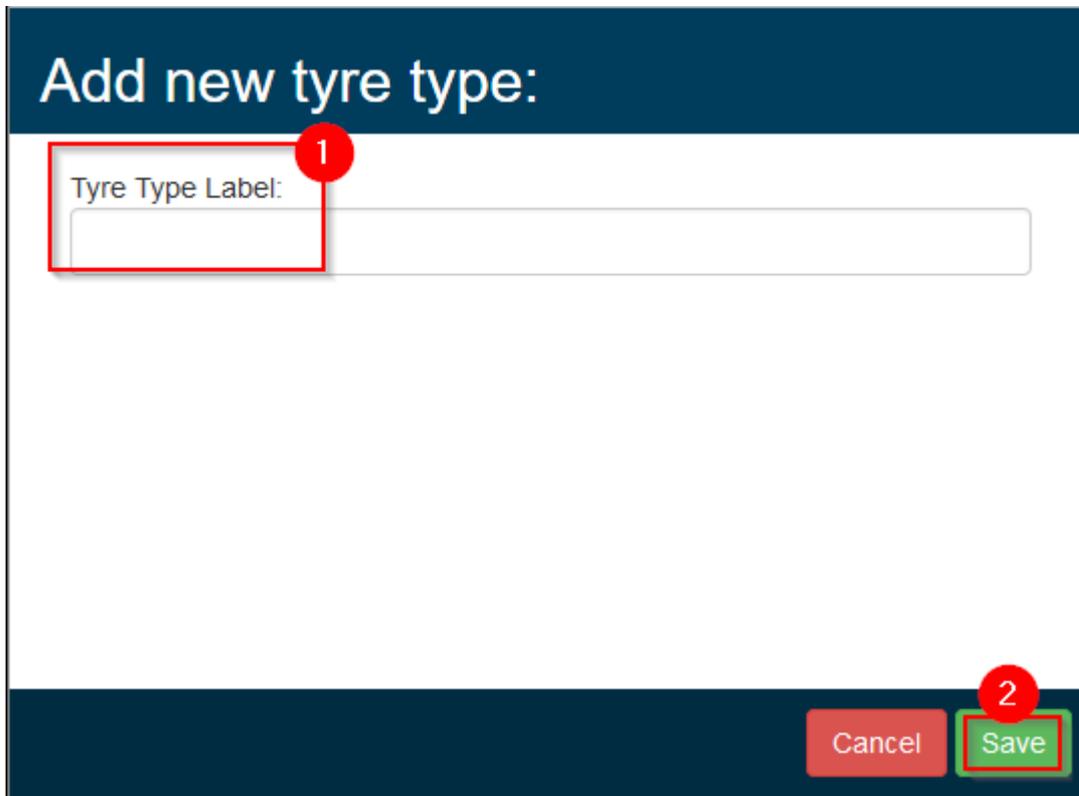

Add new tyre type:

Tyre Type Label:

Cancel Save

Option 2 - 'On the fly':

If the setting `TYRE_TYPE_ADD_ON_THE_FLY` is not equal to 512 in settings then you will be able to add repairers on the fly. The below list shows the various permissions that can be assigned to `TYRE_TYPE_ADD_ON_THE_FLY` in settings:

0 = ALL users can add repair types on the fly

4 = Contractors and above users can enter repair types on the fly

32 = Standard and above users can enter repair types on the fly


128 = Managers and above users can enter repair types on the fly

256 = Only Administrators can enter repair types on the fly

512 = No users can enter repair types on the fly

To check if `TYRE_TYPE_ADD_ON_THE_FLY` is enabled click on your username at the top-right

of the screen (1) and then click Settings (2):

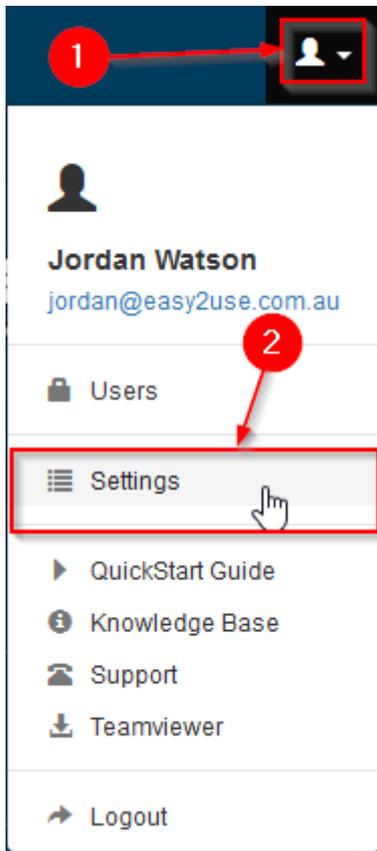


Scroll down this screen until you find the System Parameter TYRE_TYPE_ADD_ON_THE_FLY:

TYRE_TYPE_ADD_ON_THE_FLY	32	Determines what level of user can add a tyre_type on-the-fly
--------------------------	----	--


You can simply click on the number to edit the value.

Adding a Tyre Type on the fly can be completed from various screens, from this example we will be completing it from the Tyres screen. Click Tyres (1) on the left hand side of the screen:

Add or Edit Tyre Types

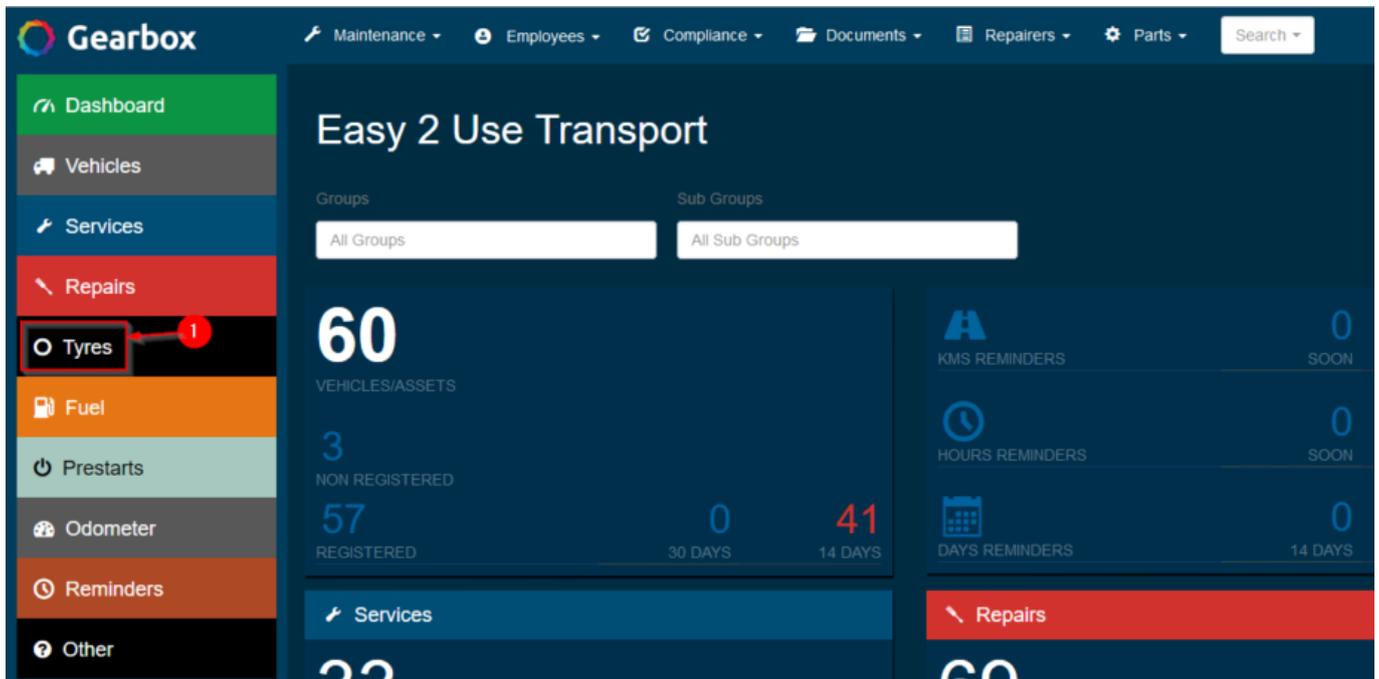

Click the green New Tyre button (1):

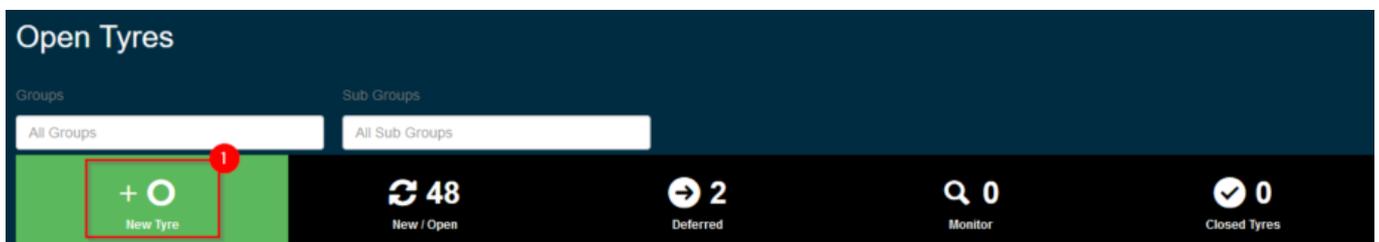

Assign a vehicle to the Tyre (1), otherwise you will not be able to create a new Tyre type on the fly, click the Add Item (2) button next to Tyre Items:

