
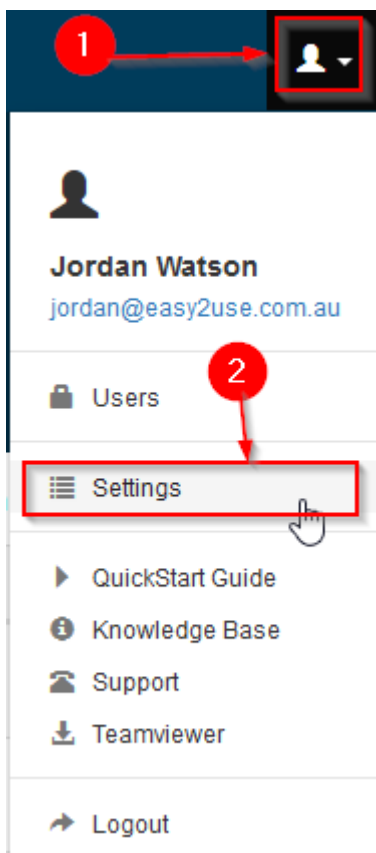
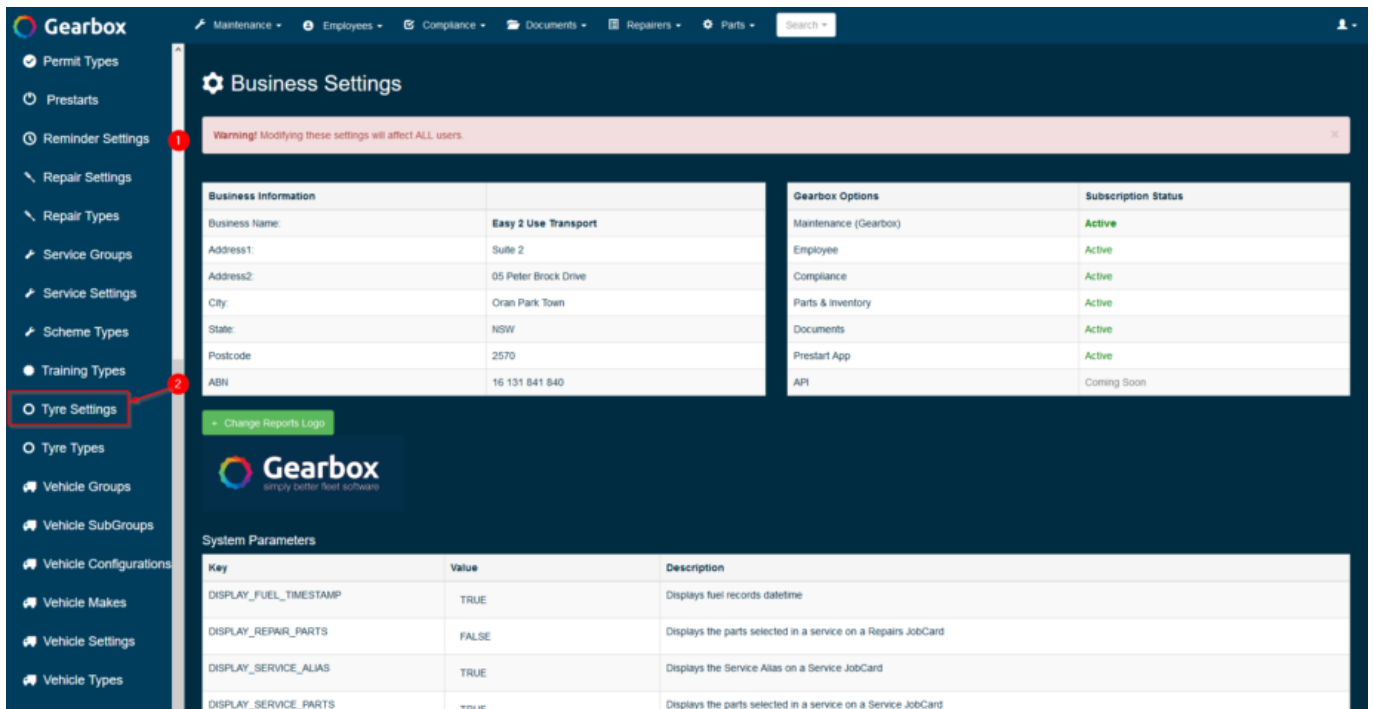


To edit Tyre Settings, click on your username at the top-right of the screen (1) and then click Settings (2):

 If "Settings" is not visible in your menu, contact your system administrator to request access.



On the left-hand side of the screen, scroll to the bottom of the page (1). You will be able to see Tyre Settings (2), click on Tyre Settings:



From here you will be able to edit Repair Settings, any changes made to the values will be saved once you have clicked out of the setting:

○ Tyre Settings

Key	Value	Description
TYRE_BLANK_LINES	2	Displays the number of blank lines on a Tyre Jobcard (Enter 0 to switch off completely)
TYRE_LABOUR_LINES	0	Displays the number of labour lines on a Tyre Jobcard (Enter 0 to switch off completely)
TYRE_PARTS_BLANK	0	Displays a blank parts list on the Tyre Jobcard to allow recording of additional parts (Enter 0 to switch off completely)
TYRE_TYREGRAM	TRUE	Displays the Tyregram on the Tyre Jobcard

[< Back to System Settings](#)